

Installation/Operating Instructions Spring-Roller Window Shades by Draper

Caution

- ① Open carton along length, not at end. DO NOT use a knife to open.
- ② Each shade is tagged with the size. If fascia is included, each piece is marked. If your order indicated "IM dimensions, Draper to allow," the fascia will be $\frac{1}{8}$ " less than the size ordered; if OM dimensions were indicated, fascia will be exact size specified.
- ③ Install all Draper window shades level. Check with carpenter's level.
- ④ Left and right brackets are different; be sure you are installing the proper brackets in the proper opening.

Please follow installation guidelines carefully. Failure to do so invalidates warranty.

With brackets—

- ① Mount brackets according to type of installation. Use appropriate fasteners (two per bracket) for wall, jamb or ceiling (see Fig. 1).

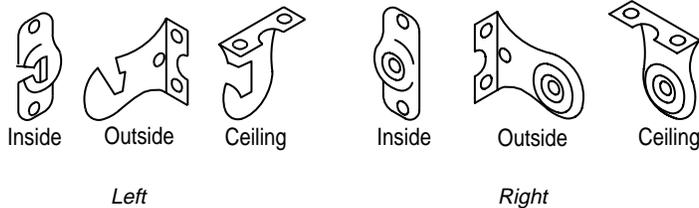


Figure 1

NOTE: Left and right brackets are different; make sure you're installing the proper bracket.

- ② Insert idler end into right bracket (see Fig. 2).

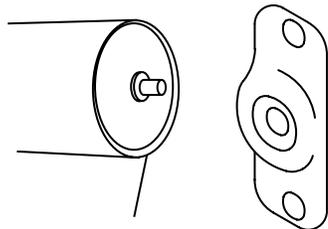


Figure 2

- ③ Lower spear on left end of roller into left bracket and rotate into locked position (see Fig. 3).

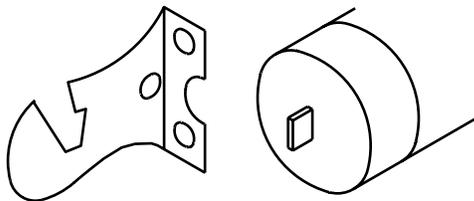


Figure 3

DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999 ■ fax 765-987-7142
e-mail draper@draperinc.com ■ www.draperinc.com

Copyright © 2000 Draper, Inc.

FormWSSRi00

Printed in U.S.A.

With endcaps—

- ① For installations with fascia, mount endcaps according to type of installation. Use appropriate fasteners for wall, jamb, or ceiling (see Fig. 4).

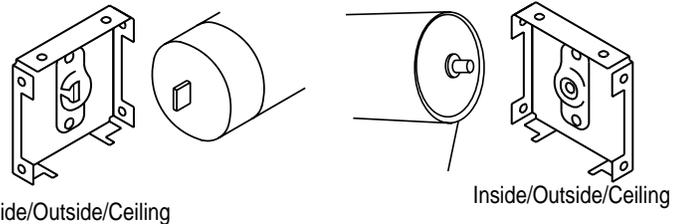


Figure 4

- ② Install shade using steps 2 and 3 (see Fig. 4).
- ③ Place fascia top lip over top edge of endcaps, then rotate down and snap into place (see Fig. 5). NOTE: Make sure shade fabric does not retract completely behind fascia.

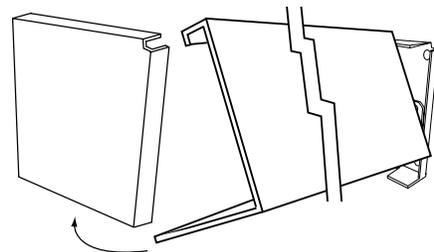


Figure 5

Troubleshooting

Roller loose in brackets:

If shade roller is loose in brackets (roller should have about $\frac{1}{8}$ " end play) and doesn't readily roll up shade, unroll shade and remove from brackets. Re-roll the cloth by hand and replace in brackets.

Roller too tight:

If shade roller is wound too tight, shade will not fully or freely unroll. Remove rolled up shade from brackets, partially unroll cloth by hand, and replace in brackets.

Fabric uneven:

If shade fabric is coming off the roller unevenly (one end lower than the other), unroll shade (be sure to leave enough shade material on the roller to allow you to roll shade back up). Place a small piece of masking tape near the top of the fabric, on the side that is low.

