

Installation/Operating Instructions

Techmatic Window Shades by Draper

Caution

- ① Open carton along length, not at end. Do NOT use a knife to open.
- ② Each shade is tagged with the size. If fascia is included, each piece is marked. If your order indicated "IM dimensions, Draper to allow," the fascia will be $\frac{1}{8}$ " less than the size ordered; if OM dimensions were indicated, fascia will be exact size specified.
- ③ Install all Draper window shades level. Check with carpenter's level.

Please follow installation guidelines carefully. Failure to do so invalidates warranty.

With Brackets—

- ① Mount brackets according to type of installation. Use appropriate fasteners (two per bracket) for wall, jamb or ceiling (see Fig. 1). Locate brackets so that outside edge-to-edge equals the IM dimension (see Fig. 1).

Please Note: The same bracket type is used for wall, jamb, and ceiling mounting. There are also no designated "right" or "left" brackets. $2\frac{3}{8}$ " or 3" bracket available. Hole locations and bracket footprints are the same, except for the distance of the center hole from the wall or ceiling, and the front end of the bracket from the wall or ceiling (see Fig. 1).

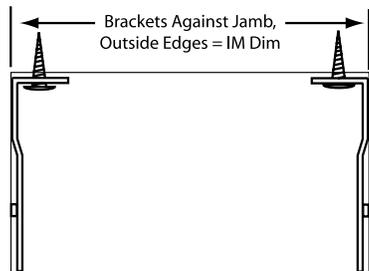
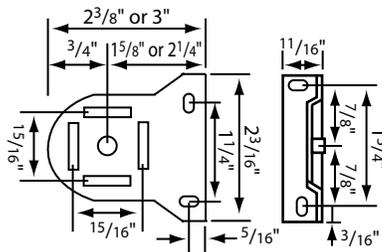


Figure 1

- ② Place spring-loaded pin on idler end into center hole in bracket (see Fig. 2).
- ③ Supporting the idler bracket with one hand, carefully push roller/fabric assembly toward the idler bracket, depressing the spring-loaded pin, and slip clutch tabs into slots in bracket (see Fig. 2).

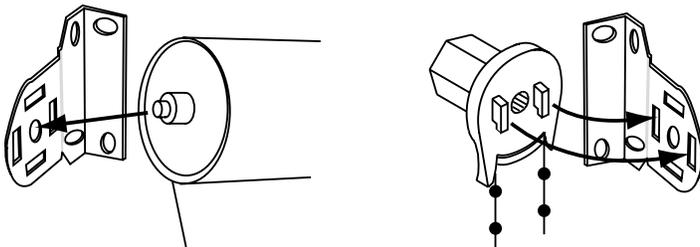


Figure 2

- ④ Gently pull down on operator end to lock tabs in bracket slots.
- ⑤ If bracket covers are provided, attach carefully by hand (see Fig. 3). If covers will not snap into place, use a small rubber mallet to tap gently into place.


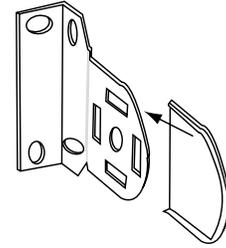


Figure 3

With Fascia—

- ① For installations requiring fascia, mount endcaps using appropriate fasteners for wall, jamb, or ceiling (see Fig. 5).
- ② Place spring-loaded pin on idler end into center hole in bracket (see Fig. 5).
- ③ Supporting the idler bracket with one hand, carefully push roller/fabric assembly toward the idler bracket, depressing the spring-loaded pin, and slip clutch hooks into slots in bracket (see Fig. 5).

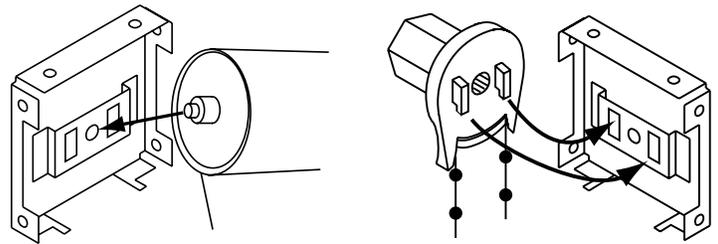

Idler End

Clutch End

Figure 5

- ④ Check to be sure the roller is installed level and run the shade up and down to be sure the fabric is tracking properly.

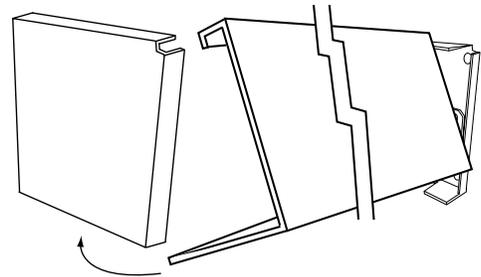


Figure 6

- ⑤ Place fascia top lip over top edge of endcaps, then rotate down and snap into place (see Fig. 6). **NOTE:** Make sure shade fabric does not retract completely behind fascia.
- ⑥ Run shade to desired "up" position and place a stop ball on the chain in the desired location. Repeat procedure to set the down stop.

Side-to-Side Mounting—

For applications where several windows are separated by narrow mullions, Draper Techmatic shades can be mounted side-to-side by sharing brackets. For mounting several shades in a row, Techmatic brackets are designed to allow the idler of one shade to be held in place on one side, and the clutch end of a second shade to be held in place on the other side.

DRAPER